

Hauptständer

YAMAHA XT 660 Z Ténéré

Art.-Nr.: 505.4526 00 01 schwarz



Montage

Der Bausatz umfasst die folgenden Teile:

Stück Bestellnr. Bezeichnung

1	700010585	Hauptständer
1	700010586	Schraubensatz:
1	700012925	Feder Typ 5
2		Stahldistanz, abgesetzt Ø25/17,5 x Ø10,5 x 14
4		U-Scheiben Ø10,5

Stück Bestellnr. Bezeichnung

2		Sechskantschrauben M10 x 40
2		Selbstsichernde Mutter M10
1		Anschlaggummi

Bitte kontrollieren Sie nun die Funktionalität Ihres Hauptständers und überprüfen Sie die Festigkeit aller montierten Teile.

Nehmen Sie das Motorrad vom Hauptständer und kontrollieren Sie den Hauptständer nach der Montage auf das selbstständige Hochklappen in die obere Endlage.

Allgemein:

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von HEPCO & BECKER gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben mit folgenden Werten anziehen:

M 6 - 9,6 Nm M 8 - 23 Nm M 10 - 46 Nm

Gegebenfalls die Schraubverbindungen mit Schraubensicherung zusätzlich sichern.



Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

Die Kurvenfreiheit kann durch einen Hauptständer eingeschränkt werden.

Montage des Hauptständers linke Seite:

Die abgesetzte Stahldistanz Ø 25/17,5 x Ø10,5 x 14 fetten und in die Lasche des Hauptständers von innen nach außen einsetzen.

Befestigung des Hauptständers mit Sechskantschrauben M10 x 40, U-Scheiben ø10,5 und selbstsichernder Mutter M10.

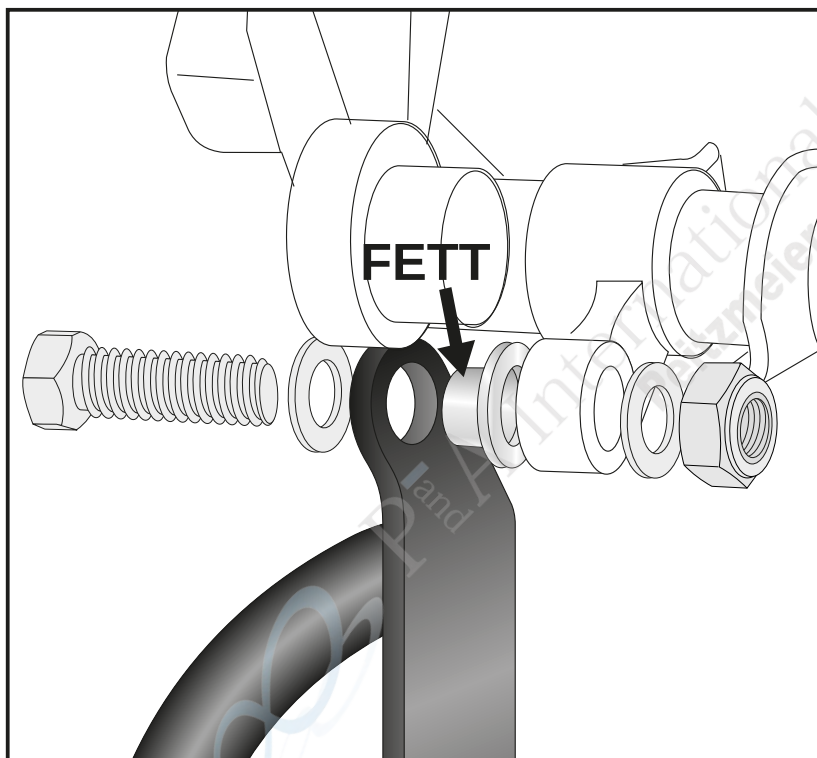

Hauptständer

YAMAHA XT 660 Z Ténéré

Art.-Nr.: 505.4526 00 01 schwarz





Montage

Montage des Hauptständers rechte Seite:

Die abgesetzte Stahldistanz $\varnothing 25/17,5$ x $\varnothing 10,5$ x 14 fetten und in die vorhandene Lasche des Hauptständers von innen nach aussen einsetzen.

Befestigung des Hauptständers mit Sechskantschrauben M10 x 40, U-Scheiben $\varnothing 10,5$ und selbstsichernder Mutter M10.

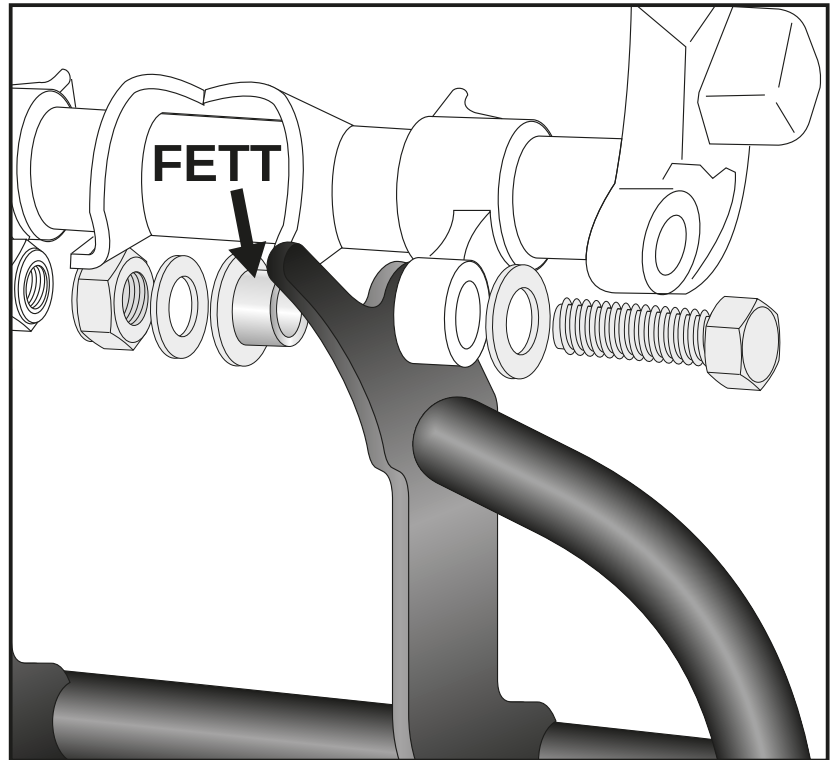
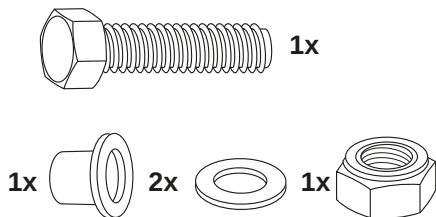


Montage der Feder Typ 5:

Die Feder wird an der vorhandenen Aufnahme am Rahmen eingehängt.

Dann die Feder am Bolzen des Hauptständers einhängen.

Wir empfehlen hierfür das als Zubehör erhältliche Federmontage-Werkzeug (Art.-Nr.: 710134)

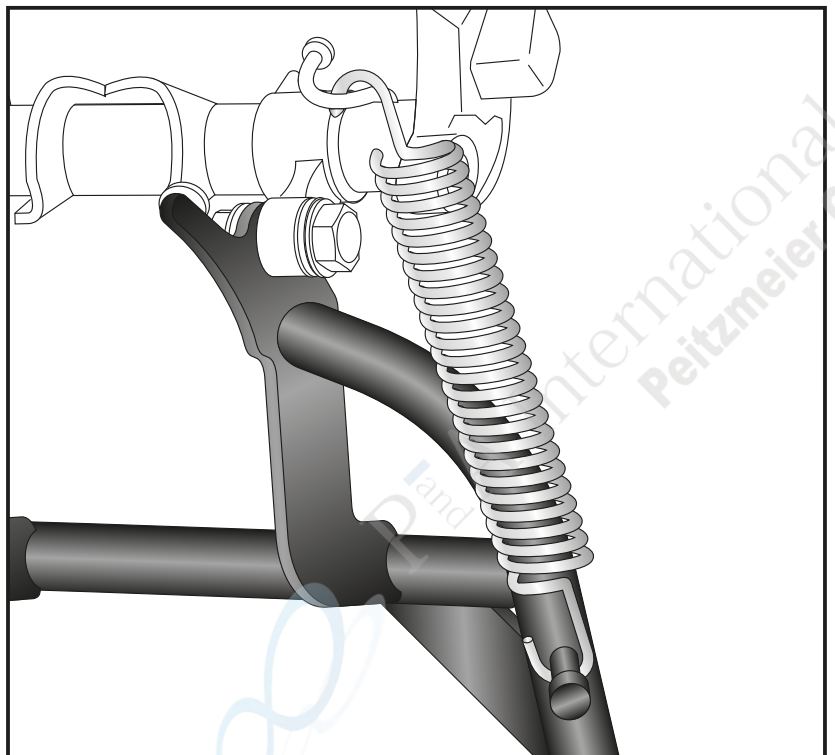


Hauptständer

YAMAHA XT 660 Z Ténéré

Art.-Nr.: 505.4526 00 01 schwarz



Montage

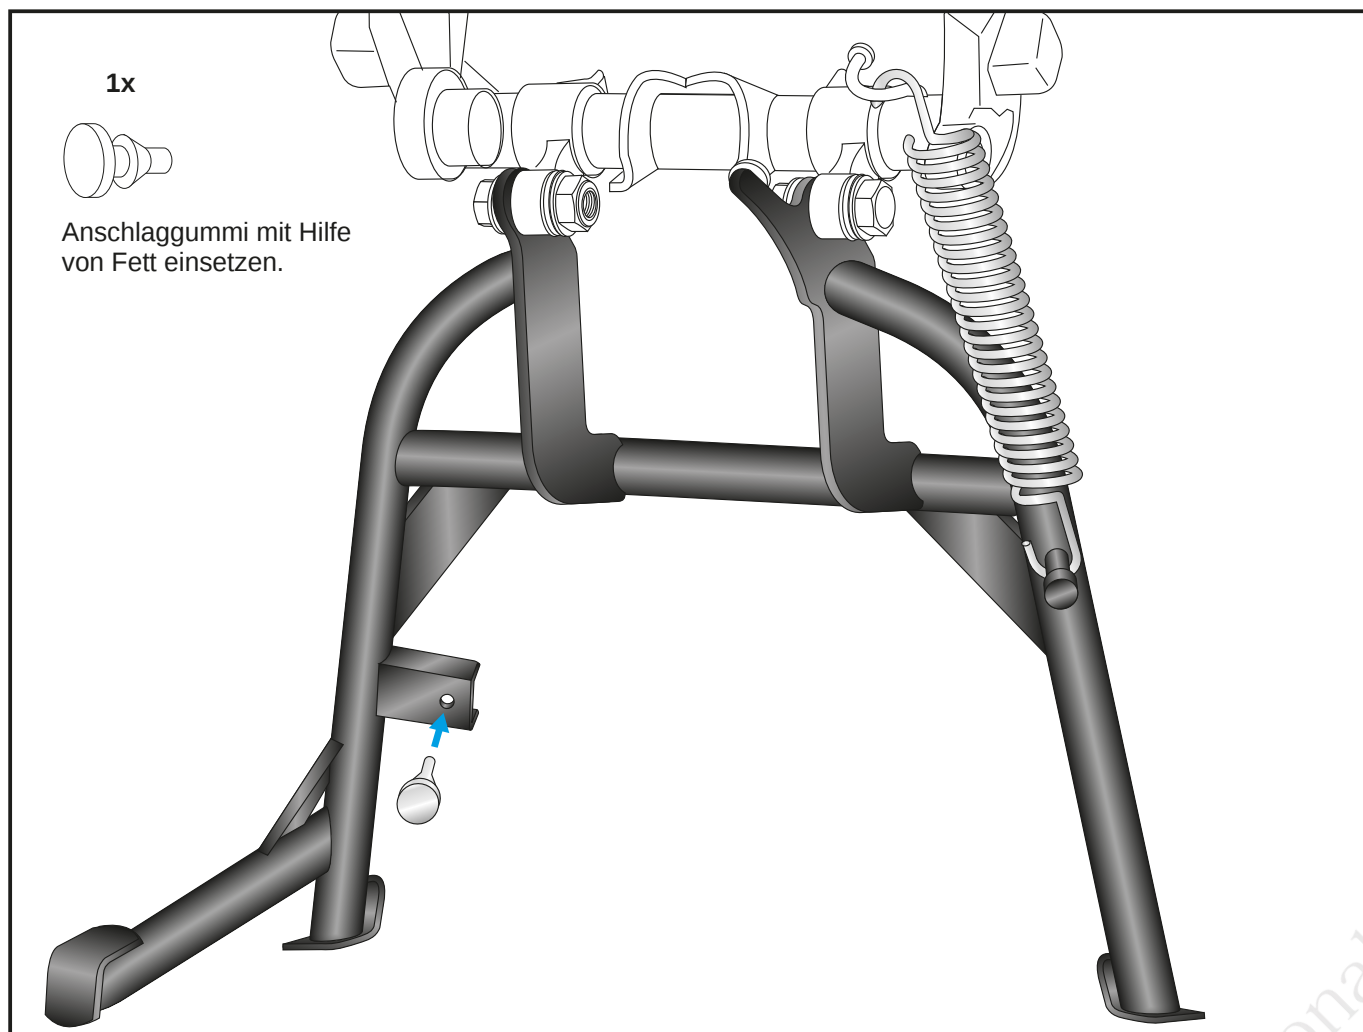

Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Center stand

YAMAHA XT 660 Z Ténéré

Item-no.: 5054526 00 01 black



Assembling instructions

The kit includes the following parts:

quant	item no.	description
1	700010585	center stand
1	700010586	screw kit:
1	700012925	spring type 5
2		special steel distance $\varnothing 25/17,5 \times \varnothing 10,5 \times 14$
4		washer $\varnothing 10,5$

quant	item no.	description
2		hexagon bolt M10 x 40
2		self-lock nut M10
1		rubber

Please check now the function of your centre stand and control all assembled screw connections for tightness!

General:



Centre stand cornering clearance:
HEPCO & BECKER centerstands are carefully designed and tested to eliminate reductions in cornering clearance and ground clearance under most driving conditions on an unmodified stock motorcycle, and are certified to be compliant with European ABE safety standards. Use of any centrestand may reduce cornering clearance or ground clearance under extreme driving situations. HEPCO & BECKER products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer.

HEPCO & BECKER takes no responsibility for damages caused by improper installation.
All screws, bolts, and nuts, including all replacement hard ware provided by HEPCO & BECKER, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle.

The side-sway-behavior may be restricted by the centre stand.

Fastening of the centre stand left side:

First mount the special steel spacer $\varnothing 25/17,5 \times \varnothing 10,5 \times 14$ with grease to the center stand from inside to outside.
Fix the centre stand with hexagon bolt M10 x 40, washers $\varnothing 10,5$ and self lock nut M10.

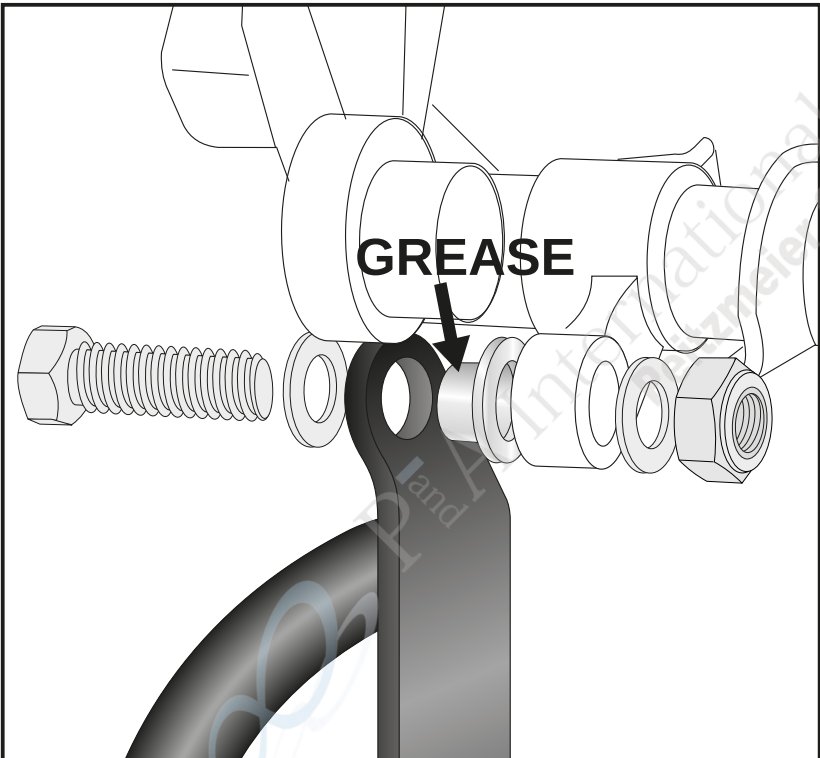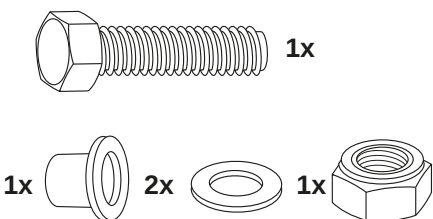

Center stand

YAMAHA XT 660 Z Ténéré

Item-no.: 5054526 00 01 black





Assembling instructions

Fastening of the centre stand right side:

First mount the special steel spacer $\varnothing 25/17,5 \times \varnothing 10,5 \times 14$ with grease from to inside to outside.

Fix the centre stand with hexagon bolt M10 x 40, washers $\varnothing 10,5$ and self lock nut M10.

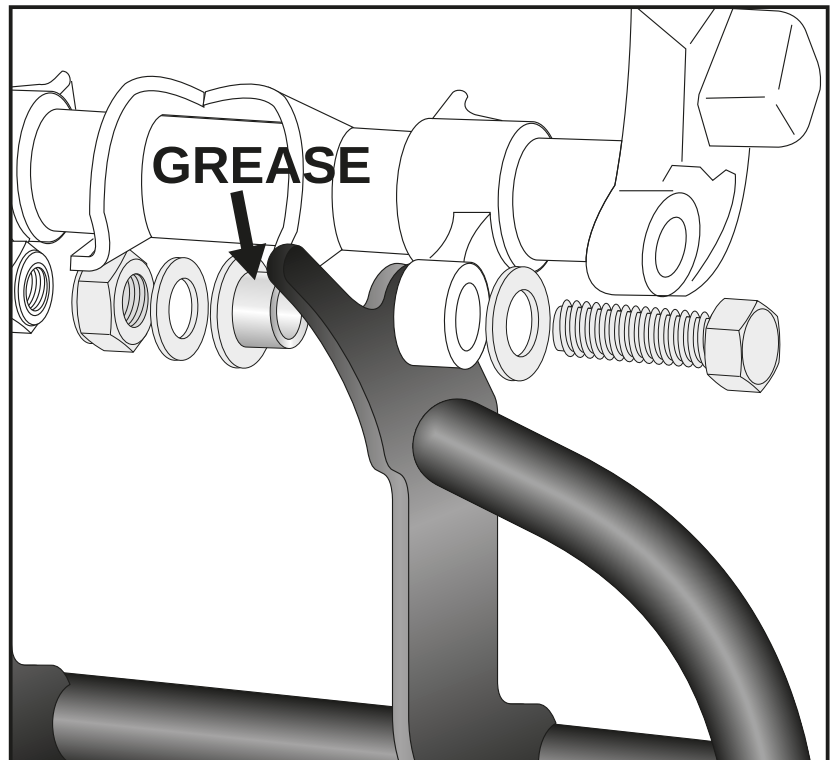
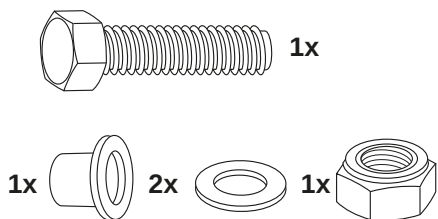


Fastening of the spring type 5:

The springs will be fixed at the original fixing point of the bike.

Then the spring has to be fastened on the dowel pin at the side of the centre stand.

We recommend our spring-mounting kit (item.-No.: 710134).

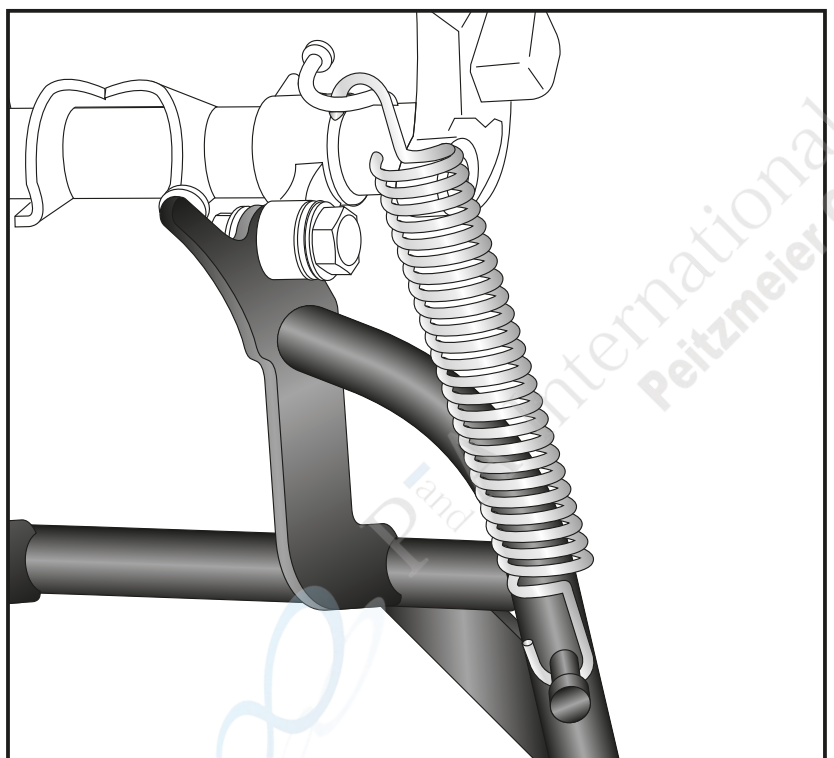


Center stand

YAMAHA XT 660 Z Ténéré

Item-no.: 5054526 00 01 black



Assembling instructions

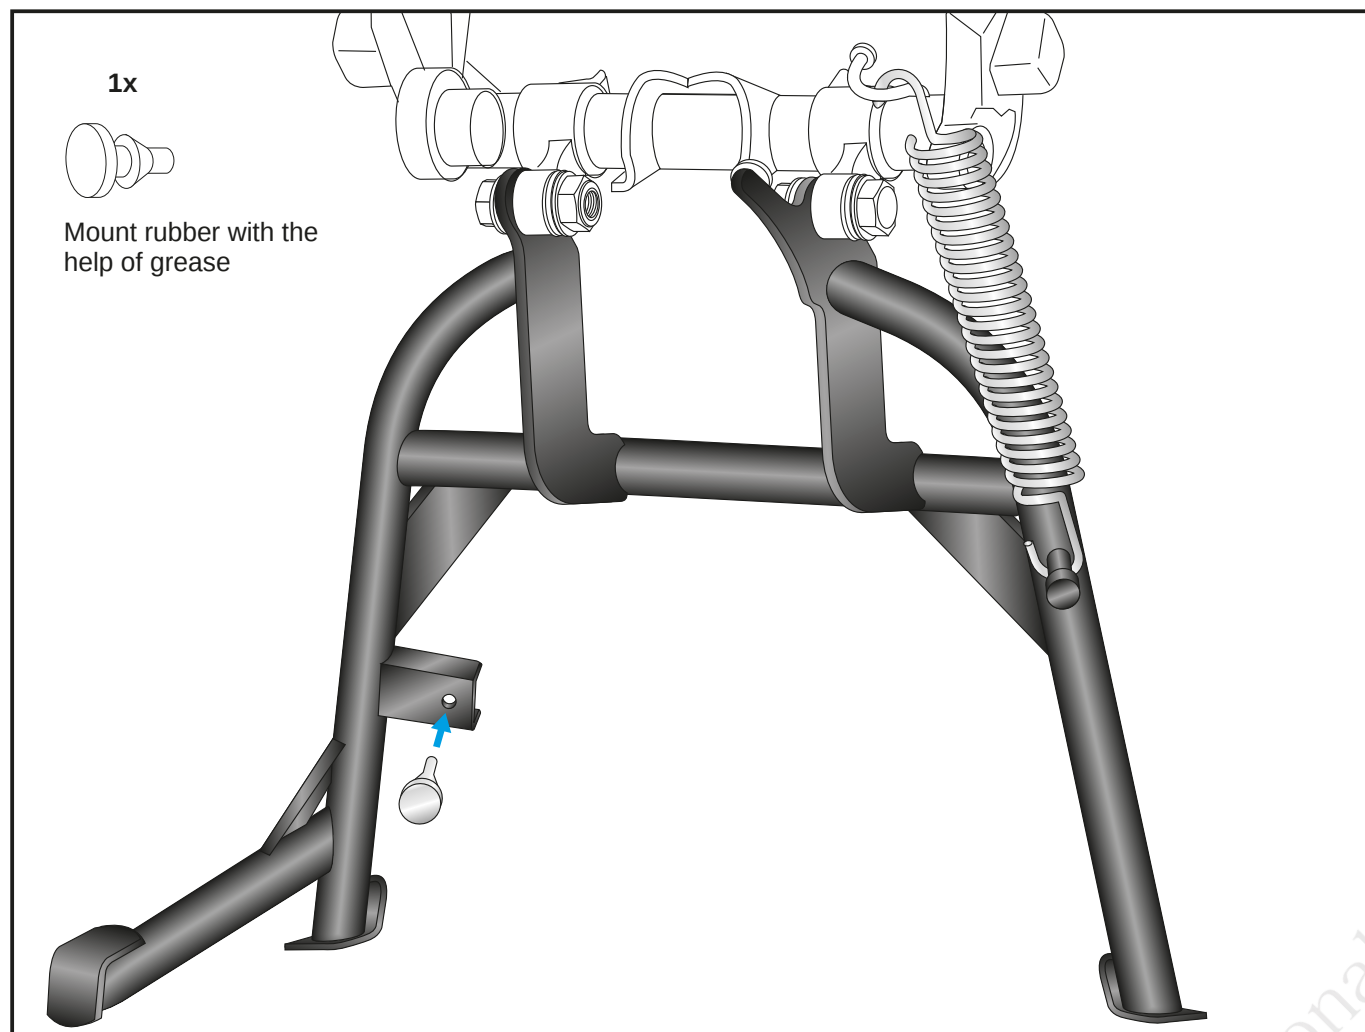

Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de