

Rear carrier  
Aluminium rack

## HONDA CROSSRUNNER

Item - No.:  
650.968 01 01 black

Side cases  
Top cases  
luggage frames  
Lock it system  
Softbags  
Aluminium luggage  
Leather luggage  
Protection bars  
Center stands  
Chopper parts  
Accessories



### Assembling instructions

The kit includes the following parts:

Quant	item no.	description	
1	700006881	contains:	
	1	799.901HB	alu-rack
	1	799.902HB	bow for Alu-rack
	1	799.903HB	plastic cover for rack
1	700007627	tube adapter left	
1	700007628	tube adapter right	
4	150.782	allen screw M8 x 20	
4	150.885	allen screw M6 x 12	
4	150.762	allen screw M6 x 18	
4	150.809	washer ø6,4	

Quant	item no.	description	
4	150.810	washer ø8,4	
2	150.811	washer ø10,5	
4	150.799	self-nock nut M6	
4	150.164	special washers 20 x 20 x ø6,4	

Tip:

Fit all parts and screw on not too strong.  
After mounting all parts, the screws should be  
tightened to the torque specified.  
This guarantees, that the kit is mounted  
without tension.



Rear carrier  
Aluminium rack

HONDA CROSSRUNNER

Item - No.:  
650.968 01 01 black

Side cases  
Top cases  
luggage frames  
Lock it system  
Softbags  
Aluminium luggage  
Leather luggage  
Protection bars  
Center stands  
Chopper parts  
Accessories




## Assembling instructions

### Preparing:



Dismantle seat.  
Dismantle rear cover.  
Dismantle original handle bars - they are obsolete.

### Fastening of the tube adapters left+right:

at the free threads of the handle bar with allen screws M8x20 with washers Ø8,4. Sandwich washers Ø10,5 between tube adapter and frame at the front fixing point.

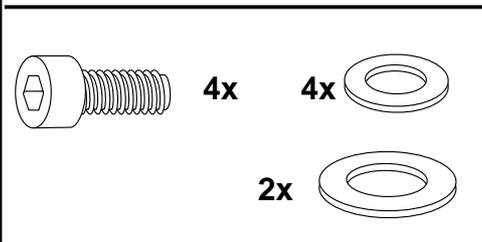

1

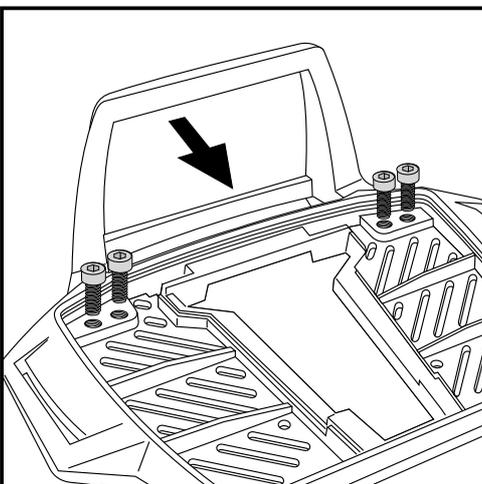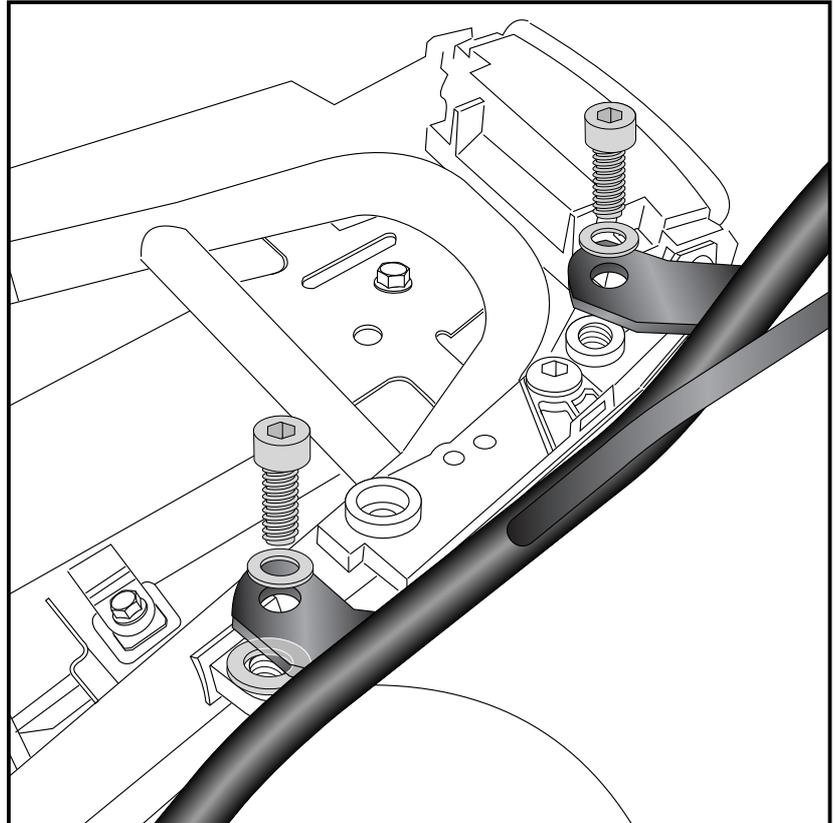


2

### Fastening of the bow for the rack:

Fix the bow to the rack with allen screws  
M6 x 12.

#### NOTICE:

The bow is only needed in use with a Hepco & Becker topcase.



Luggage ideas.

2

Rear carrier  
Aluminium rack

HONDA CROSSRUNNER

Item - No.:  
650.968 01 01 black

Side cases  
Top cases  
luggage frames  
Lock it system  
Softbags  
Aluminium luggage  
Leather luggage  
Protection bars  
Center stands  
Chopper parts  
Accessories






## Assembling instructions

Fastening of the alu-rack:  
with allen screws M6 x 18, special washer  
20 x 20 x ø6,4, washers ø6,4 and self-  
lock nuts M6.

Mount the plastic cover.

Now screw on all parts and mount the  
rear cover of the bike again.

7

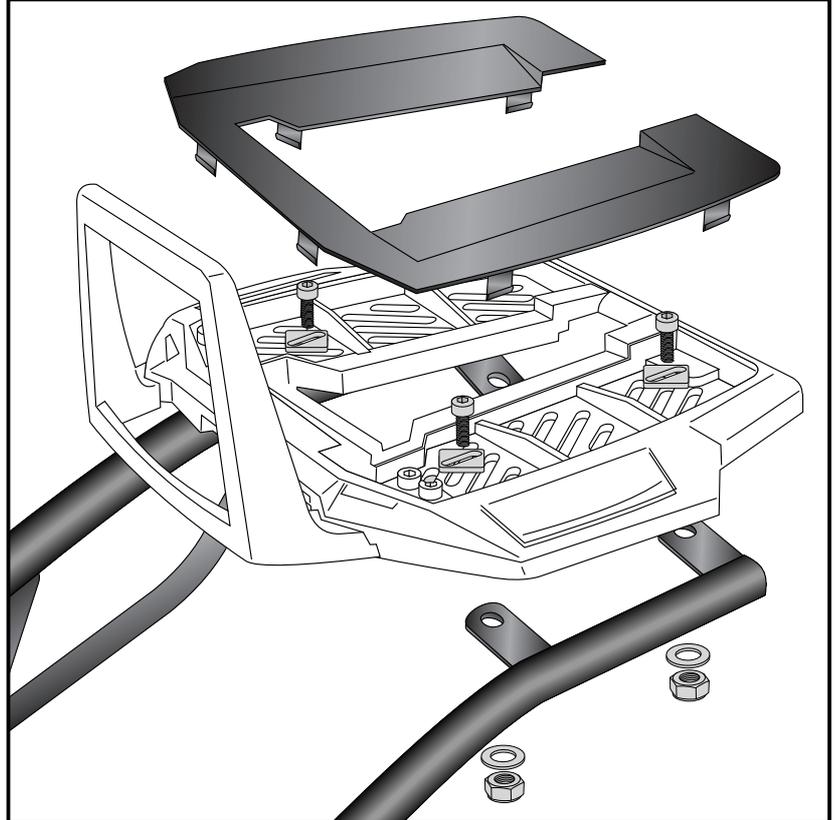

each  
4x

**Control all screw connections after the assembling for tightness!**  
**Please notice our enclosed service information.**

Also available:

Side carrier (Lock it System, removable)

Engine guard

Center stand

C-Bow Holder for softbags

Item-No. 650.968 00 01

Item-No. 501.968

Item-No. 505.968

Item-No. 630.968



**Hepco & Becker GmbH**  
**An der Steinmauer 6**

**D-66955 Pirmasens**

**Tel.: +49 (0)6331 - 1453 - 100**

**Fax: +49 (0)6331 - 1453 - 120**

**eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)**

**[www.hepco-becker.de](http://www.hepco-becker.de)**

Montage eines / Fastening of an

# EASYRACK

anstelle des Aluracks / instead of the Alurack



## Montage Assembling instructions

1	700008650	Easyrack	1	700008650	Easyrack
1	700008647	Abdeckblende links	1	700008647	plastic cover left
1	700008648	Abdeckblende rechts	1	700008648	plastic cover right

Easyrack und Alurack werden auf die gleiche Weise auf der beigegeführten, motorrad-spezifischen Unterkonstruktion befestigt. Es wird der gleiche Schraubensatz wie bei der Montage des Aluracks verwendet.

Easyrack and Alurack are mounted on the bike - specific support in the same manner. The same set of screws is used for the mounting.

### Montage des Easyrack:

Das Easyrack wird mit den Zylinderschrauben M6 x 20, Viereck-Scheiben 20 x 20 x ø6,4, U-Scheiben ø6,4 und selbstsichernden Muttern M6 an den vorhandenen Bohrungen in der Unterkonstruktion (modellabhängig) verschraubt.

Anschließend die Kunststoffabdeckung links und rechts montieren.


**Die genannten Schrauben, U-Scheiben und Muttern liegen dem Schraubensatz des Aluracks bei.**

### Fastening of the Easyrack:

with allen screws M6 x 20, special washer 20 x 20 x ø6,4, washers ø6,4 and self-lock nuts M6.

Mount the plastic cover left + right.

**Notice: the screws, washers and nuts are included in the screw set of the Alurack.**

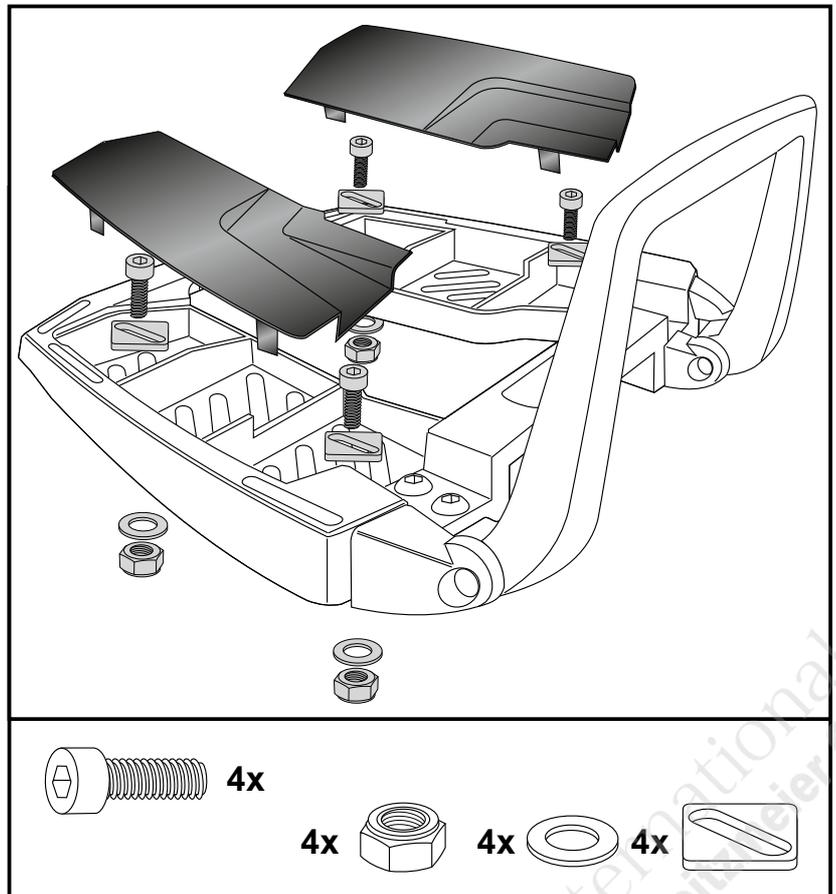

**Schutzfolie vom Aufkleber entfernen!  
Remove protective film from sticker!**



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens

**Tel.: +49 6331 - 1453 - 100**  
**Fax: +49 6331 - 1453 - 120**  
**eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)**  
**[www.hepco-becker.de](http://www.hepco-becker.de)**